
 
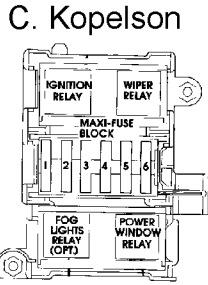


FROM HUMMER
OWNERS MANUAL
FOR GAS & DIESEL TRUCKS
CUT THIS AREA OUT

FUSE	AMPERAGE	CIRCUIT PROTECTED
7C	10	Cruise Control
1D	-	Blank
2D	10	TCM/PCM Battery
3D	10	Lighter
4D	10	Stoplights
5D	15	Hazard
6D	20	Horn Relay
7D	30	HVAC Blower
1E	5	Spare Fuse
2E	-	Blank
3E	7.5	Spare Fuse
4E	-	Blank
5E	15	Spare Fuse
6E	-	Blank
7E	25	Spare Fuse
1F	5	Spare Circuit-Lights
2F	5	Panel Lights Dimmer Module
3F	7.5	Front Parking/Running Lights
4F	7.5	Rear Parking/Running Lights
5F	15	Trailer Lights
6F	5	Under Hood/Trouble Lights



Fuse/Circuit Breaker No.	Amperage	Circuit Protected
1 (CB)	20	Headlights
2 (CB)	30	Parking/Running Lights
3 (CB)	30	Rear Window Defroster
4 (-)	20	Blank
5 (CB)	30	Power Windows
6 (FLISE)	40	Ignition Switch

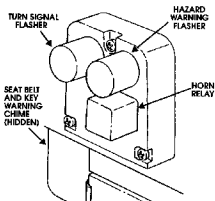

FUSE	AMP	CIRCUIT PROTECTED
1A	5	Spare Fuse
2A	7.5	Spare Fuse
3A	-	Blank
4A	10	Spare Fuse
5A	15	Spare Fuse
6A	-	Blank
7A	20	Spare Fuse
1B	5	Glow Plug Controller
2B	-	Blank
3B	7.5	Glow Plug Controller
4B	5	Gauges & Indicator Lights
5B	10	Transmission Ignition
6B	10	PCM/Ign Pwr/Brk Sw
7B	20	Engine Ignition Feed
1C	5	Transmission Shift Lock/Remote Entry
2C	10	A/C Clutch/Rear Def. HVAC
3C	7.5	Back-Up Lights
4C	10	Turn Signals
5C	5	Digital Ratio Adapter (Speedometer)
6C	20	Rear A/C

7F	5	Light Circuit to Chime and HVAC
1G	5	CTIS/Key Chime
2G	5	Power Windows - Ignition Relay
3G	7.5	Spare Circuit-Ignition Acc
4G	7.5	Radio - Acc
5G	-	Blank
6G	-	Blank
7G	25	Windshield Wiper/Washer
1H	5	DLC Power
2H	10	Radio - Battery
3H	20	Power Door Locks/Power Mirrors
4H	7.5	Spare Circuit - Battery Feed
5H	15	Dome/Courtesy Lights
6H	20	Cigarette Lighter
7H	25	Trailer Brake Controller

* May not be provided.

CUT THIS OUT AND GLUE IT TO THE
INSIDE OF YOUR PANEL DOOR.